

Pumpkin LED String Lights

Product Manual & Customer Guide

A simple guide to setup, operation, care, and troubleshooting for model NG-20.

Brand	Besitek
Model	NG-20
Light count	20 pumpkin-shaped LED lights (per main listing details)
String length	Approximately 10 ft; supplier description also states 9.8 ft
Power	3 × AA batteries (not included)
Light modes	Steady and flickering modes (based on the main listing details)
UPC	717378534357

Important source note: Supplier copy contains conflicting references to other LED counts and mode counts. This guide uses the main listing details—20 LEDs and two modes—and does not treat the conflicting lower-page claims as confirmed.

1. Product Overview

These battery-powered decorative string lights feature orange pumpkin-shaped LEDs for Halloween displays and seasonal decorating. Because they run on batteries, they can be placed where a nearby wall outlet is not available. Actual appearance and light output may vary with battery condition and surroundings.

2. Before You Begin

- Check the string, battery compartment, and wiring for visible damage before use.
- Use three AA batteries. Batteries are not included.
- Choose a location where the battery compartment can remain dry and accessible.
- Keep packaging and small parts away from young children.

3. Installation & Setup

- **Open the battery compartment.** Locate the battery box and open its cover according to the markings or molded tabs on the unit. Do not force the cover.

- **Insert batteries.** Install 3 AA batteries, matching the + and – polarity markings inside the compartment.
- **Close the compartment.** Secure the cover fully before switching the lights on.
- **Arrange the string.** Drape or position the lights gently around a suitable display. Avoid sharp bends, pinching the wire, or pulling on individual pumpkin covers.
- **Choose a mode.** Use the product's switch or control to select steady or flickering operation, as available on your unit.

4. Placement & Safety

- **Protect the battery box from rain and moisture.** The battery compartment should be kept sheltered and dry. Do not submerge the lights or battery box.
- For outdoor decorating, place the battery compartment in a protected, dry location and use the string only in conditions suitable for the product.
- Keep the lights away from open flames, heaters, and other high-heat sources.
- Do not use the product if wires are frayed, insulation is damaged, the battery box is cracked, or corrosion is present.
- Remove batteries before storage or if the lights will not be used for an extended period. Do not mix old and new batteries or different battery types.
- Follow the battery manufacturer's safety instructions. Never attempt to recharge non-rechargeable AA batteries.

5. Care & Storage

- Switch the lights off before cleaning or adjusting the string.
- Wipe the exterior gently with a dry or slightly damp soft cloth; keep moisture out of the battery compartment.
- Do not use abrasive cleaners, solvents, or immerse any part of the product in water.
- Remove batteries before storing. Keep the string loosely coiled in a cool, dry place, away from direct sunlight and heavy objects.

6. Troubleshooting

Problem	What to check
Lights do not turn on	Confirm that all 3 AA batteries are installed with correct polarity, are not depleted, and the battery cover is fully closed. Check the switch position.
Lights are dim or inconsistent	Replace the batteries with a fresh matched set of 3 AA batteries. Check that battery contacts are clean and dry.
Mode does not change	Operate the switch or control again. The exact control arrangement can vary by product version; do not force a switch.
Corrosion or moisture in battery box	Stop using the lights and remove batteries if safe to do so. Do not operate until the compartment is dry and the unit is confirmed safe; replace damaged parts or discontinue use.

7. Frequently Asked Questions

Are batteries included?

No. The lights require 3 AA batteries, which must be supplied separately.

How long is the string?

Approximately 10 ft; the supplier also describes it as 9.8 ft.

Which light modes are confirmed?

The main listing details identify steady and flickering modes. Supplier copy elsewhere conflicts with this, so additional modes are not confirmed in this guide.

Can I leave the battery box in the rain?

No. Keep the battery compartment protected from rain and moisture. No verified waterproof rating is available for this guide.

Is this an official manufacturer manual?

No. This is a customer guide prepared by LightDecorHub from the available product listing information; it is not an official Besitek-issued manual.

8. Product Identification & Source

Brand: Besitek

Model: NG-20

UPC: 717378534357

Supplier listing: <https://www.amazon.com/Halloween-Decoration-Flickering-Waterproof-Decorations/dp/B0F8R8DMYL>

Keep this guide for future reference. If the physical product's labels or included instructions differ, follow the product-specific safety information supplied with your unit.