

PRODUCT SETUP & SAFETY GUIDE

FINDISCO R68

Four-Lens RGB Disco Light

For indoor parties, Halloween displays, karaoke and small celebrations

Model	R68
Power input	DC 5V via USB (as listed)
Rated power	10W (as listed)
Dimensions	Approx. 19.1 × 11.7 × 11.9 cm

Prepared by LightDecorHub as a practical setup guide based on the available product listing information. This document is not the manufacturer's official manual.

1. Before You Begin

Read this guide before connecting or operating the light. Keep the unit in a dry indoor location unless the manufacturer confirms that the exact model is rated for outdoor use.

- **Check the package:** light unit, remote control, USB cable and product manual are listed as included.
- **Prepare separately:** two AAA batteries for the remote control and a compatible DC 5V USB power source. Batteries and the USB power adapter are not included.
- **Inspect the unit:** do not use it if the housing, cable or connector is damaged.
- **Choose a stable location:** place the light on a level surface where it cannot fall or be knocked over.

2. Product Information

Item	Details
Brand / model	FINDISCO R68
Product type	Four-lens RGB disco / party effects light
Light sources	72 listed light sources (verify against supplier documentation)
Power input	DC 5V via USB
Rated power / current	10W / 2A as listed
Dimensions	Approx. 19.1 × 11.7 × 11.9 cm
Housing	Black metal housing (as listed)

Some specifications are based on the current listing information and should be confirmed against the label and documentation supplied with your individual unit.

3. Setup Instructions

Step 1 — Position the unit

Place the light on a stable, level surface in a dry indoor area. Keep it away from water, moisture and flammable materials.

Step 2 — Aim the lenses

Point the lenses toward a wall, ceiling or display area. Avoid aiming the light directly into anyone's eyes.

Step 3 — Connect USB power

Connect the supplied USB cable to the light and a compatible DC 5V power source. The adapter is not included. Do not use an incompatible supply.

Step 4 — Prepare the remote

Insert two AAA batteries according to the polarity markings inside the battery compartment. Do not mix old and new batteries.

Step 5 — Switch on

Use the unit's controls or remote as described in the supplier's instructions. Exact button labels and sequences have not been independently verified.

Step 6 — Select a mode

Choose a supported lighting effect. For sound-activated operation, select the sound mode and test it with music at a moderate level.

Step 7 — Adjust placement

Reposition the unit or projection direction if the effects are not visible. Keep cables out of walkways and away from pinch points.

Step 8 — Power down

Switch off and disconnect the unit when not in use. Allow it to cool if needed before packing it away.

4. Safety Precautions

- **Indoor use:** outdoor weather resistance has not been verified. Do not leave the unit exposed to rain, snow or moisture.
- **Electrical safety:** disconnect power before inspection or cleaning. Do not handle plugs or connections with wet hands.
- **Light exposure:** do not stare into the lenses or aim the light directly at eyes.
- **Heat and ventilation:** keep the unit clear of curtains, paper and other flammable materials. Do not cover the housing or block openings.
- **Cable safety:** route the USB cable where it will not be tripped over, crushed or pulled.
- **Damaged equipment:** stop using the light if it overheats, emits an unusual smell, flickers abnormally or shows visible damage.
- **Children:** supervise children around electrical equipment and keep small batteries out of their reach.
- **Cleaning:** disconnect power first. Use a soft, dry cloth; do not immerse the unit or allow liquid to enter it.

5. Troubleshooting

Problem	Checks / possible solution
Light does not turn on	Check USB connections and confirm the source is compatible DC 5V. Try a known-good compatible source. Stop if the cable or unit is damaged.
Remote does not respond	Install two AAA batteries, check polarity, try fresh batteries and point the remote toward the unit.
Sound mode does not respond as expected	Confirm sound-activated mode is selected. Test with music at a moderate level and consult the supplier manual for mode-specific details.
Effects are hard to see	Try a dimmer room, aim toward a suitable wall or ceiling, and make sure the lenses are not blocked.
Light flickers or disconnects	Power off, inspect the cable and connections, and use a compatible stable power source. Stop using it if abnormal heating or damage is present.
Unit gets wet	Disconnect power if safe to do so. Do not operate it while wet. Seek qualified assistance if moisture may have entered the housing.

6. Package Contents

- 1 × FINDISCO R68 four-lens RGB disco light
- 1 × remote control

- 1 × USB cable
- 1 × product manual (listed as included)
- Not included: 2 × AAA batteries and USB power adapter

7. Care and Storage

- Switch off and disconnect the power source before cleaning.
- Keep the unit dry and store it in a cool, dry place away from direct moisture.
- Protect the lenses, cable and remote from impact during storage.
- Remove batteries from the remote if it will be stored for a long period.

8. Support and Important Notice

For product-specific operating instructions, exact remote-control button functions, warranty coverage or repair guidance, refer to the official manual supplied with your unit or contact the product seller.

LightDecorHub prepared this practical guide from available listing details. It is not an official manufacturer document, and it does not replace instructions or warnings supplied with the product. Confirm all electrical ratings and operating details on the product label before use.

LightDecorHub | Light Your Space. Live Your Style.