

Product Manual

HoneyFair SE368 · 12-in-1 Halloween Projector Lights Outdoor

LightDecorHub · Model SE368 · MPN SE368

1. Product Overview

The HoneyFair SE368 is an outdoor Halloween projection light designed for seasonal decorative displays. It provides 12 interchangeable Halloween projection patterns and four selectable light colors: green, red, white, and warm white. The projector features a 270° adjustable head, a 16-foot power cord, remote control, ground stake, and round base.

2. Specifications

Brand	HoneyFair
Model	SE368
Manufacturer	Zhongshan Yongqi Electronic Technology Co., Ltd.
Light source	LED
Material	Metal
Colors	Green, Red, White, Warm White
Patterns	12 interchangeable patterns
Adjustable head	Up to 270°
Power cord	16 ft
Mounting	Ground stake or round base
Remote	Included
Dimensions	4.75 × 5.12 × 10.63 in
Weight	1.21 lb
Warranty	2-year manufacturer warranty

3. Installation

- 1. Choose a clear projection surface such as a house wall, garage door, porch area, or other suitable display surface.
- 2. Use the ground stake for lawn or soil areas, or the round base on a suitable stable solid surface.
- 3. Secure the projector and point the adjustable head toward the desired display surface.
- 4. Adjust the projector head to aim the projection; the head can swivel up to 270°.
- 5. Select one of the 12 interchangeable Halloween pattern discs and install it in the projector.
- 6. Connect the 16-foot power cord to a suitable electrical outlet. Keep electrical connections protected from water and moisture.
- 7. Use the remote control to choose the desired pattern, color, lighting mode, and available timer setting.
- 8. Fine-tune the projector position until the image is displayed clearly where desired.

4. Remote Control

Use the included remote control to turn the projector on or off, change colors and patterns, select lighting modes, and set timer options.

5. Outdoor Safety

- Keep electrical connections away from standing water and moisture.
- Secure the power cord so it does not create a trip hazard.
- Secure the projector before operation.
- Protect the cable from vehicles, doors, and sharp or damaging contact.
- Use the product only in conditions appropriate for its rated outdoor use.
- Do not operate the product if the cord or electrical components are damaged.

6. Troubleshooting

- **Projection is not visible:** Check power, turn the projector on, verify a pattern is installed, and aim it at a suitable surface.
- **Projection is misaligned:** Adjust the projector head and reposition the unit.
- **Projector is unstable:** Secure the ground stake in suitable soil or place the round base on a stable, level surface.
- **Remote does not operate:** Check that the projector has power and retry the remote.
- **Color or pattern is incorrect:** Use the remote to select another color or pattern and verify the pattern disc is installed correctly.
- **Cable creates a hazard:** Re-route and secure the 16-foot cable away from walking paths and other hazards.

7. Care and Storage

Disconnect power after seasonal use. Remove the projector and mounting parts and store the projector, pattern discs, remote, and cable in a clean, dry location protected from impact and excessive moisture.

8. Warranty

The supplied product information states a 2-year manufacturer warranty. Retain purchase information and contact the seller or manufacturer through the applicable support channel for warranty assistance.

Important: This LightDecorHub guide is based on the product specifications supplied for the HoneyFair SE368 listing. It is not a replacement for an original manufacturer manual supplied with the product.