

Halloween Ghost String Lights

6.5 ft (78 in) white ghost garland with warm LED illumination



Important: This guide is based on the product information available at the time of writing. It is not a manufacturer-issued manual. Confirm battery compartment details and any supplier-specific instructions before use.

1. Product overview

A decorative Halloween garland featuring white ghost-shaped covers and warm LED lights. Suitable for seasonal indoor displays such as mantels, windows, shelves, party tables, and themed room décor.

2. Product specifications

Product	Halloween Ghost String Lights
Approximate length	6.5 ft (78 in)
Appearance	White ghost shapes with dark eyes
Light color	Warm LED glow
Power source	2 AA batteries required
Batteries included	No
Quantity	1 garland

3. Setup and installation

- Inspect the garland, wire, battery compartment, and ghost covers before installing. Do not use the product if wires are cut, frayed, crushed, or exposed.
- Place the garland on a dry, stable surface or hang it from a suitable support. Keep it away from open flames, heaters, hot surfaces, and places where it could be pulled or snagged.
- Open the battery compartment using its intended latch or screw. Insert 2 AA batteries following the polarity marks (+/–) inside the compartment. Batteries are not included.
- Close the compartment securely before switching the lights on. If the product has an on/off switch, use it to test the lights before arranging the garland.
- Arrange the wire loosely; do not stretch, knot, tightly wrap, or pinch it in doors or windows.

4. Safety precautions

- For decorative use only. Keep away from children under 3 years due to small parts and batteries; supervise children around the product.
- Keep batteries out of reach of children. Do not mix old and new batteries, different battery types, or rechargeable and non-rechargeable batteries.
- Insert batteries with the correct polarity. Remove batteries if the garland will be stored for a long period or if batteries are depleted.
- Never recharge non-rechargeable batteries, short-circuit them, disassemble them, or expose them to fire or excessive heat.
- Remove batteries promptly if leakage occurs. Avoid contact with leaked material; follow local guidance for safe disposal.
- Keep the battery compartment and product dry. Outdoor or wet-location use is not recommended unless the supplier confirms an appropriate weather-resistance rating.

5. Troubleshooting

Issue	What to check
Lights do not turn on	Check that both AA batteries are installed, fresh, and aligned with the polarity marks. Confirm the compartment is fully closed and the switch is in the ON position, if fitted.
Lights are dim or flicker	Replace both batteries together with new matching AA batteries. Check that the battery contacts are clean and that the compartment is secure.
One section appears damaged	Switch off and remove batteries if safe to do so. Stop using the garland if the wire, insulation, or battery compartment is damaged.
Ghosts or wire become detached	Turn the lights off and gently reposition without pulling on the wire. Do not use sharp tools or staples that may pierce the wiring.

6. Cleaning and storage

- Switch off and remove batteries before cleaning or storing.
- Wipe gently with a dry, soft cloth. Do not immerse the garland, use liquid cleaners on electrical parts, or spray it with water.
- Allow the product to remain completely dry. Store in a cool, dry place away from direct sunlight, heat, and heavy objects that could crush the ghosts or wiring.

7. Frequently asked questions

Are batteries included? No. The garland requires 2 AA batteries, which must be purchased separately.

Can it be used outdoors? Outdoor weather resistance has not been confirmed. Use indoors unless the supplier provides a verified outdoor-use rating.

How long is the garland? The listed approximate length is 6.5 ft (78 in).

Can I repair damaged wiring? Do not use the garland if wiring is damaged. Do not attempt electrical repairs; replace the product or contact the seller.

8. Disposal

Remove batteries before disposal. Recycle batteries and electrical products through suitable local collection programs where available. Do not place batteries in fire or dispose of them with household waste where local rules prohibit it.

Keep this guide for reference. Product details may vary; follow any instructions supplied with the actual item.