

PUMPKIN LED WINDOW STRING LIGHTS FOR HALLOWEEN

General Product Guide & Safety Manual

Store	LightDecorHub
Product ID	2830
SKU	LDH-HAL-02830
Price listed in store	\$23.99
Document status	General guidance — not a manufacturer-issued manual

Important: The exact supplier model for SKU LDH-HAL-02830 has not been confirmed. This guide is general safety and setup guidance only. It does not confirm the product's length, LED count, power source, timer, remote, materials, weather rating, or package contents.

1. Before Installation

- Read the instructions included with the exact product model and keep them for future reference.
- Check the package against the supplier's listed contents. Inspect the lights, wires, battery box, adapter, and mounting parts for damage.
- Confirm the power source, battery type or adapter rating, intended placement, and whether the model is approved for indoor or outdoor use.
- Do not use damaged products or modify wiring, connectors, or sealed components.

2. Safety Precautions

- **Weather rating:** Do not assume the lights are waterproof or suitable for outdoor use. Check the exact model's rating first.
- **Power:** Use only the power source and voltage specified by the manufacturer. Never connect an adapter with an unverified rating.
- **Batteries:** If battery-powered, use the specified battery type and correct polarity. Do not mix old and new batteries or different battery types.
- **Placement:** Keep wires clear of doors, walkways, heat sources, and areas where they could be pulled or tripped over.
- **Children and pets:** Keep small parts, batteries, and packaging out of reach of young children.
- **Damage or moisture:** Stop using the product if wires or components are damaged, unusually hot, corroded, or wet beyond the model's rating.

3. General Setup

- Choose a stable window or display location that suits the exact product's indoor/outdoor rating.
- Unroll the string carefully; do not pull sharply, knot, cut, or stretch it unless the manufacturer explicitly allows it.
- Attach the lights only using the included or approved mounting method. Avoid sharp edges that could damage insulation.
- Position the power or battery compartment as instructed and keep it accessible for operation and inspection.
- Connect the specified power source or install the specified batteries, following polarity and voltage instructions.
- Test the lights before completing the display and ensure the string does not obstruct window operation or emergency exits.

4. Operation and Timer

- Use only the switches, lighting modes, timer, or remote control actually supplied with the exact model.
- A timer or remote has not been verified for this store product. Check the supplier's product listing and instructions before assuming either is included.
- If the lights do not operate, switch them off before checking the power source or connections.

5. Cleaning and Storage

- Switch off and disconnect the power source where the manufacturer's instructions permit before cleaning.

- Clean only with the method recommended by the manufacturer. Do not immerse the lights or battery compartment.
- Do not use solvents or abrasive cleaners unless approved by the manufacturer.
- Remove batteries for storage only if the instructions recommend it. Store the product dry and protected from crushing or tangling.

6. Troubleshooting

- **Lights do not turn on:** Check the switch, battery orientation, power source, adapter rating, and connections according to the manual.
- **Lights flicker unexpectedly:** Check for loose connections or low batteries, if applicable. Stop use if wiring is damaged.
- **Timer or remote does not work:** Confirm the feature is included and follow its model-specific instructions.
- **Lights or battery compartment become hot or wet:** Turn off power if safe to do so and stop using the product until the manufacturer provides guidance.
- **Missing accessories:** Compare the package with the supplier's contents list and contact the seller.

7. Product Details to Verify

- String length and number of LEDs.
- Power source, battery type, or adapter voltage.
- Timer, remote control, and lighting modes, if any.
- Materials, light color, and included mounting accessories.
- Indoor/outdoor suitability and the exact weather-resistance rating.

8. Support

- LightDecorHub support: info@lightdecorhub.com.
- Shipping policy: lightdecorhub.com/shipping-policy/.
- Returns policy: lightdecorhub.com/refund-and-returns-policy/.
- This document is a general guide prepared for LightDecorHub product ID 2830. It is not an official manufacturer manual and must not replace the exact model's safety instructions.